



User manual

CORDLESS WET & DRY VACUUM CLEANER
MISTRAL



CVC5783MW

02/12

HOME APPLIANCES

TABLE OF CONTENTS

SAFETY REGULATIONS	4
THE PRODUCT	5
ASSEMBLY	6
THE USE	6
MAINTENANCE AND CLEANING	8
SOLVING PROBLEMS	9
COMPULSORY INFORMATION REGARDING THE DECREE ON BATTERIES	10
TECHNICAL DETAILS	10
GUARANTEE	11
SERVICE FORM	12

SAFETY REGULATIONS


Warning:

When using any electrical appliance, always observe all basic safety precautions. The following instructions should be followed to reduce the risk of fire, electric shock or injury.

General:

1. Read this manual carefully before using the appliance. Keep this manual in a safe place for future reference.
2. Use the appliance only as described in this manual.
3. Make sure the power supply indicated on the charger corresponds with the local voltage before connecting the charger.
4. The charger should be plugged into a grounded electrical outlet.
5. Check the device regularly for damage. Do not use the device if the power cord or plug is damaged, or when any component of the device has been dropped or damaged. If the power cord is damaged, you must have it replaced by Home-tek Europe Limited, a service centre authorized by Home-tek Europe Limited or a similarly qualified person in order to avoid safety hazards.
6. This appliance is not suitable for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless someone who is responsible for their safety is supervising them or explains to them how the appliance must be used. Close supervision is required if the appliance is used in the vicinity of children, pets or plants.
7. Never allow children to play with the packaging, there is a risk of suffocation.
8. Never leave the device unattended. Always switch the device off when cleaning or servicing the device or when not in use.
9. Keep the appliance and the charger away from flames and hot surfaces.
10. Store the appliance indoors.
11. Never immerse the appliance and/or the charger in water or other liquids.
12. Do not use attachments which are not recommended by Home-tek Europe Limited, especially accessories which are not supplied with the appliance.
13. Never use the appliance in areas where certain vapors may be present (paint thinner, flammable material, oil based paint and varnish, flammable liquids and gases) for risk of a possible explosion.
14. This appliance is only intended for domestic use; do NOT use it for commercial purposes.
15. Do not use the device to vacuum hot items such as a glowing cigarette ends or to pick up combustible dust.
16. The device is only suitable, as a hand stick vacuum cleaner for vacuuming dry dust. Use for the vacuuming of liquids the hand vacuum cleaner with rubber attachment.
17. Make sure the air exhaust is not blocked.
18. Don't touch the turbo brush while in use.
19. Only use the original charger, which is suitable for this model. Don't use the charger when the cord of the charger shows signs of possible damage.


THE PRODUCT

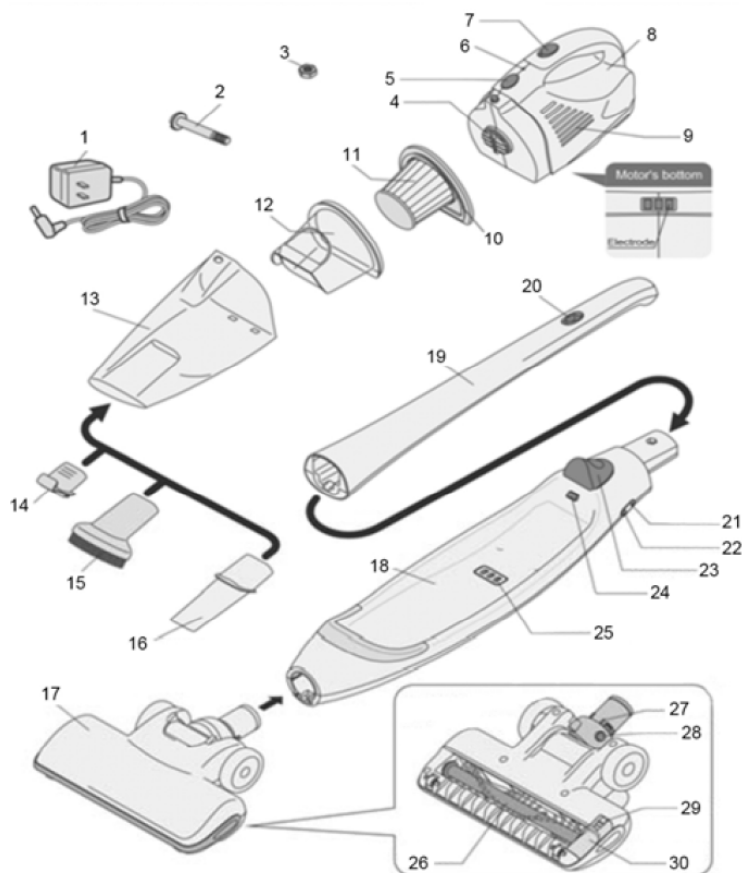


- | | |
|--------------------------------------|--|
| 1. Charger | 16. Crevice nozzle |
| 2. Bolt | 17. Turbo brush |
| 3. Nut | 18. Main unit |
| 4. Air inlet | 19. Handle |
| 5. Button to unlock dust container | 20. On/off switch stick vacuum cleaner |
| 6. Indication light power | 21. Indication light charging |
| 7. On/off switch hand vacuum cleaner | 22. Charge point charger |
| 8. Motor | 23. Button to unlock hand vacuum cleaner |
| 9. Air outlet | 24. Lock button hand vacuum cleaner |
| 10. Sealing ring | 25. Electrode |
| 11. HEPA-filter | 26. Roll brush |
| 12. Plastic cover filter | 27. Electrode |
| 13. Dust container | 28. Lock button turbo brush |
| 14. Rubber nozzle | 29. Button to unlock roll brush |
| 15. Oval brush | 30. Plastic cover roll brush |

ASSEMBLY

 - Remove all packaging materials.
 - Clean the device with a wet cloth and some detergent if necessary (also see the paragraph "maintenance and cleaning").
 - Make sure that all parts are clean and dry before assembling the appliance.
1. Place the nut into the hole at the top of the main unit (Pic. 1).
 2. Attach the handle to the main unit (Pic. 2).
 3. Place the bolt at the backside in the handle and turn the bolt clockwise to tighten it (Pic. 3).

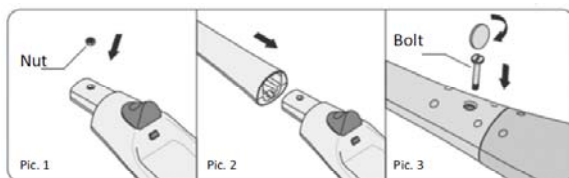

 4. Push the lock button turbo brush (28) while you place the main unit on the turbo brush (17) (Pic. 4).
5. Place the plastic cover filter (12) in the dust container (13).
6. Then put the HEPA-filter (11) in the plastic cover filter.
7. Mount the dust container with HEPA-filter thereafter on the motor (8). The hand vacuum cleaner is now fully assembled.
8. Push the hand vacuum cleaner next, with the front side downwards, into the main unit until you hear a click (Pic. 5).

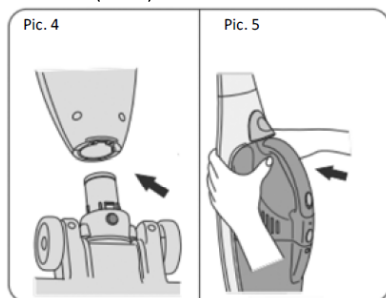

THE USE

Before use

- Charge the device for at least 24 hours before first time use (Pic. 6). After this first time charge, the maximum charging time will be 16 hours.
Note: the device may become warm during charging. This is normal.
- Check the device for damage before each use. Do not use the device if it is damaged or not working properly.

Use of the handheld vacuum cleaner

The handheld vacuum cleaner can be used for cleaning both wet and dry dirt.

1. Make sure that the handheld vacuum cleaner has been mounted in the correct way (see chapter Assembly).
2. Turn on the handheld vacuum cleaner by pushing the on/off switch on the handle (7) forward (Pic. 7).
3. If desired, you can use the following attachments:


Note: always turn off the handheld vacuum cleaner before you mount the attachments on it.

 - a. Crevice nozzle (16) (Pic. 8) to clean corners, cracks and other places which are difficult to reach.
 - b. Oval brush (15) (Pic. 9) to clean furniture.
 - c. Rubber nozzle (14) (Pic. 10) to clean up liquids.

Use of the upright vacuum cleaner

Note: the upright vacuum cleaner can only be used to vacuum dry dirt. In order to vacuum wet dirt, you must use the handheld vacuum cleaner with the rubber nozzle.

1. Make sure that the upright vacuum cleaner has been mounted correctly (see chapter Assembly).
2. Turn on the upright vacuum cleaner by pushing the on/off switch on the handle (20) forward (Pic. 11).

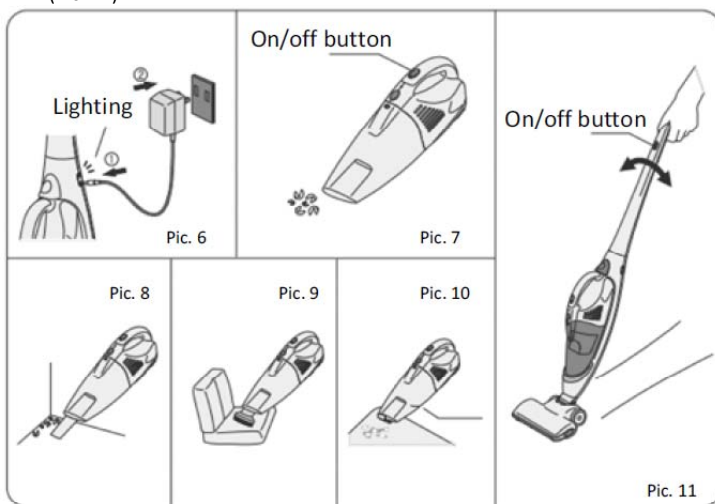

Charging

As soon as the indication light power (6) is continuously on, you must recharge the device.

Note: always turn off the device before recharging.

At the moment you turn off the device, the power indication light will be switched off. As soon as the device has been fully recharged, the light will switch on again.

After use

Recharge the device after use so it will have full power the next time you use it.


MAINTENANCE AND CLEANING

Empty dust container

Note: clean the dust container, the plastic cover and the HEPA-filter regularly. The power decreases when the dust container is too full or when the HEPA-filter is dirty.


1. Push the button (5) to unlock the dust container (Pic. 12).
2. Remove the HEPA-filter (11) and the plastic cover (12) (Pic. 13).
3. Carefully shake the dust container (13), the plastic cover (12) and the HEPA-filter (11) over a dust bin (Pic. 14 and 15).
4. The dust container (13), plastic cover (12) and the HEPA-filter may be cleaned with water (Pic. 16).

Note: do not use cleaning aids to clean the HEPA-filter and make sure all parts are completely dry before you mount them back on and use the device.

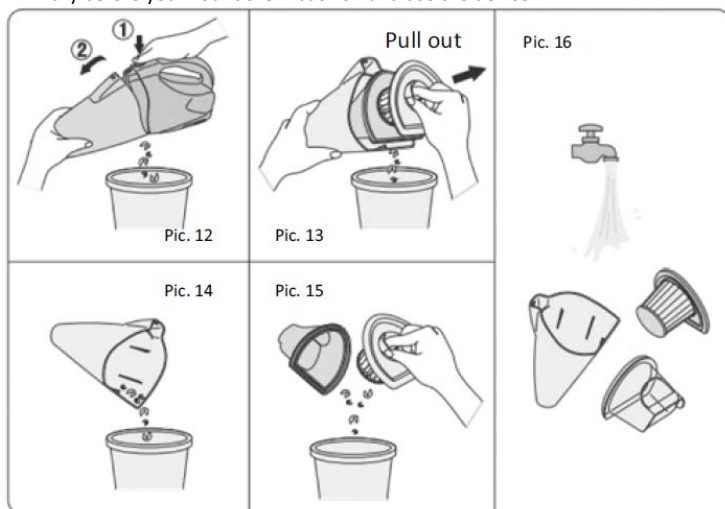

Cleaning the turbo brush

1. Push the button on the cover of the roller (30) downwards (Pic. 17).
2. Remove the roller (26) from the device (Fig. 18).
3. Remove the groove debris from the roller carefully, perhaps with scissors or a comb (Pic. 19).
5. The roller may be cleaned with water (Pic. 20).
Note: make sure that the roller is completely dry before you mount it back on and use the device.
6. Mount the roller back onto the device (Pic. 21).
7. Put the cover of the roller back on its place and push the button up to lock it (Pic. 22).

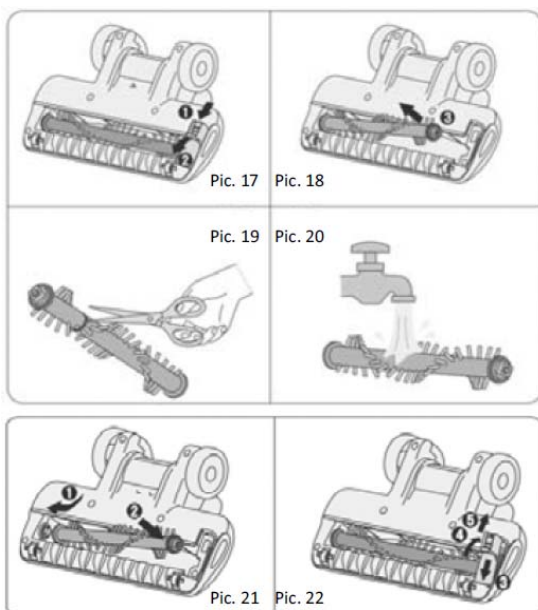

Cleaning the device

Note: never immerse the device and/or the charger in water or other liquids.

1. Shut the device down before cleaning it.
2. Clean the device with a wet cloth and some detergent if necessary and dry off thoroughly.
3. Never use abrasives, bleaching agents or steel wool to clean the device. This could cause damage to the material.

Storage

Make sure that the device and the attachments are completely clean and dry before you store the device.

SOLVING PROBLEMS

Problem	Possible cause	Possible solution
The device won't turn on	Battery is empty	Recharge the device
Low suction	The dust container is full	Empty the dust container
	The HEPA-filter is dirty	Clean the HEPA-filter
Battery empties faster	The device has not been recharged long enough	Recharge the device
	The battery won't charge	Replace the battery

COMPULSORY INFORMATION REGARDING THE DECREE ON BATTERIES

Batteries do not belong in your household waste. Users are required by law to return used batteries. For proper disposal of batteries, you can find designated disposal containers in specialized shops as well as in municipal collecting facilities. This is a solid contribution to the protection of the environment. Since 1998, the decree on batteries requires all citizens to dispose used batteries only via these specialized shops or collecting facilities. Specialized shops and manufactures are obliged to accept used batteries in return and re-use them in accordance to the decree or dispose of them as dangerous waste. If you wish to return your used batteries to us, you can mail them to our address in an adequately stamped envelope.

Batteries that need to be labelled by law are provided with one of the illustrations below, being a crossed-out wheeled bin and the chemical symbol for the classification of pollutants-containing heavy metals. The chemical symbol (Cd, Hg or Pb) will be shown under the illustration.

The following text can be found on the pollutants-containing batteries:

Pb: Battery contains lead

Cd: Battery contains cadmium

Hg: Battery contains mercury



TECHNICAL DETAILS

Model number	CVC5783MW
Vacuum cleaner input	12V dc 100W
Adapter input	230-240V~50Hz, 40mA
Adapter output	15V dc 200mA

Montiss is a registered brand name of:

Van den Berg Products BV
 IJzerwerf 10-12
 6641 TK Beuningen
 Netherlands
www.vdbergproducts.com

GUARANTEE

This guarantee covers your device for a period of 24 months from the date of purchase for service and replacement of parts, on the condition that you have used the device correctly as described in this user manual. This guarantee does not exclude national legislation that may exist in the country of purchase in regards to warranty regulations.

When you make a claim under this guarantee, you must submit the original invoice or receipt with clear mention of the date of purchase, name of retailer and the description and model number of the device. You are advised to keep these documents in a safe place.

This device is intended for domestic use only. Damage and/or malfunctions as the result of industrial or commercial use are excluded from the warranty.

The guarantee does not cover the supplied accessories or other parts of the device that are subject to wear. If you want to reorder these parts, then that is possible through www.muppa.nl.

The guarantee for this device expires if:

- The original invoice or receipt has in one way or another been changed or made illegible;
- The model or serial number on the device has been changed, removed, deleted or made illegible;
- Repairs have been executed by unauthorized repair workshops or persons who are not authorized to do so;
- The damage is the result of an external cause, such as fire damage, water damage, transport damage, atmospheric discharges, insufficient or improper maintenance;
- The device has been operated in another country than for which originally designed, approved, released and produced, as well as defects occurred as the result of such modifications;
- The device has not been used according to the guidelines and directions in this user manual supplied with the device.

In the unlikely event your device is not functioning well or shows any defect, please contact your retailer. To avoid any inconvenience, we advise you to read this user manual carefully before contacting them.

SERVICE FORM

Unfortunately we CANNOT handle any service forms that have been completed unclearly or partly.
Therefore please always fill in the service form as clearly and completely as possible!

THE PRODUCT

Article number: CVC5783MW

Article description: Montiss Cordless Wet & Dry Vacuum Cleaner *Mistral*

Shop of purchase:.....

Date of purchase:.....

YOUR DATA

Name:.....

Address:.....

Postal code:.....

City:.....

Telephone:.....

Fax:.....

E-mail:.....

DESCRIPTION OF THE PROBLEM

.....

.....

.....

.....

.....

.....

You can send this form, together with the proof of purchase, to:

Home-tek Europe Limited

Roe Head House,
Far Common Road
Mirfield, West Yorkshire
England WF14 0DQ

Tel: 08452 100888

Email: sales@hometek.co.uk